

VIBRATING STIMULATOR FOR WOMEN PEARL PANTIES



User manual

CONTROL

- 1) First insert four LR44 batteries into the vibrating cartridge according to the marked poles.
- 2) Use the rotary cap on the cartridge to regulate the vibration intensity.

MAINTENANCE

After each use, rinse the cartridge with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The cartridge is **water resistant**, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**

You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrating cartridge is powered by four LR44 batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find, panties with vibrating cartridge and 8 batteries type LR44.