

VIBRATOR VIBE THERAPY TRI

User manual



CONTROL

- 1) The bottom of the vibrator serves as a cover for the battery.
- 2) To turn on the vibrator, remove the battery cover, insert 3 AAA batteries (not included) and screw the cover back on.
- 3) To turn the vibrator on and off, press the "power" button.
- 4) Change the individual vibration rhythms by briefly pressing the button with the wave symbol.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**

You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by three AAA batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.