

# VIBRATOR BOND

## User manual



### CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) Unscrew it and insert two AA batteries into the vibrating cartridge according to the marked poles.
- 3) Screw them back in.
- 4) There is a wheel on the cover that is also used for on/off and infinitely variable vibration control.

### MAINTENANCE

After each use, rinse the device with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrator is **not water resistant or waterproof!**

### LUBRICATION

Due to the material of the vibrator, you can use **lubricants of any base**.

### DRIVE AND CHARGING

The vibrating cartridge is powered by two AA batteries.

We recommend using alkaline or rechargeable batteries for longer battery life.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find a vibrator.