

VIBRATOR BLUSH THE COLLECTION WITH LOVE RED DEVIL



User manual

CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) To turn on the vibrator, remove the battery cover, insert 2 AA batteries (not included) and screw the cover back on.
- 3) Then use the wheel to control the vibration.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy. Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!** You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Due to the material of the vibrator, you can use [lubricants of any base](#).

DRIVE AND CHARGING

The vibrator is powered by two AA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.