 


User Manual

Hyman

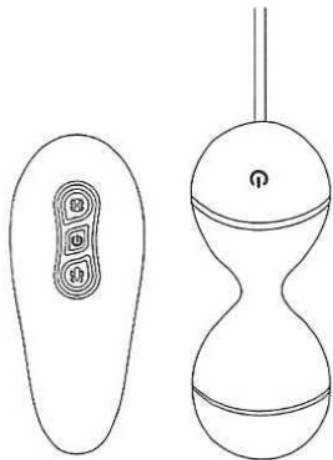

Thank you for using our product.
Please read this carefully before use.

Made in China

 
 
 
 
 
 
Product description

This product has an elegant appearance and perfect touch. It has super strong vibration and multiple vibration modes. You will get vigorous sexual stimulation. Product safety and environmental protection are part of our design philosophy. We hope to provide the user with an excellent experience. It is destined to be an extraordinary product.


1. Function: 10 vibration modes, Wireless control
2. Material: Food grade silicone, ABS
3. Battery: 170mAh rechargeable lithium battery
4. Power: USB charge 5V DC, Charging time about 1H, Using time about 2H
5. Waterproof rating: IP65

Package: 1 x Remote controller & Massage ball, 3 x Kegel balls, 1 x USB charging cable, 1 x User manual.


Instruction

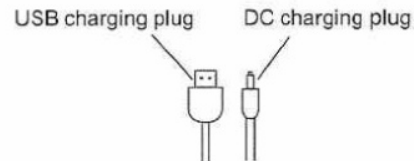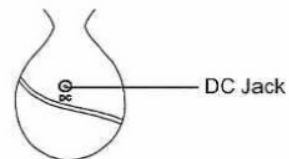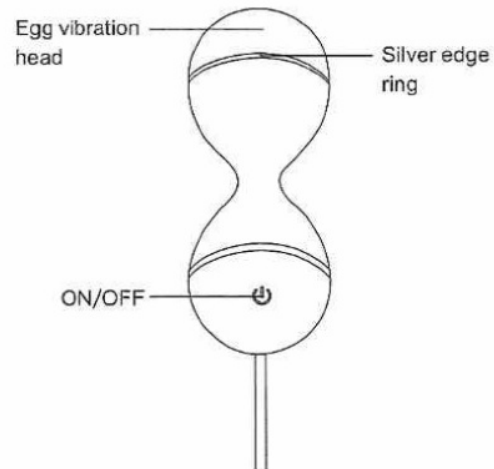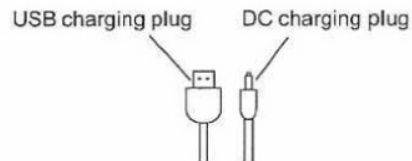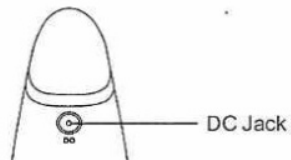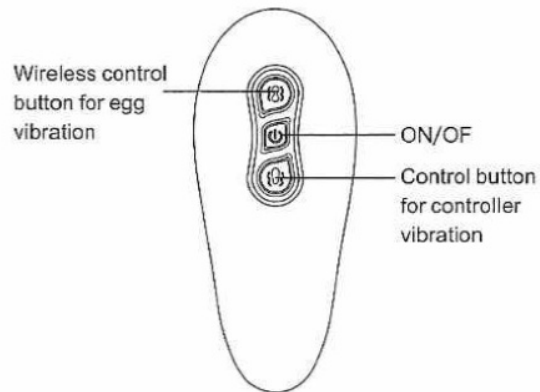


Charging Guide

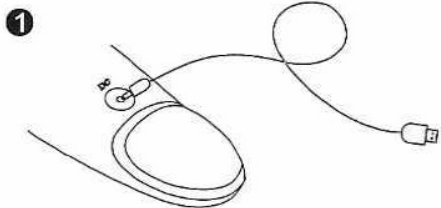 

 Put the DC charging plug into the hole of controller to charge. Then insert the USB charging plug into the USB port of your computer or other charger (output:5V=1A or 5V=1.5A).

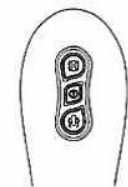

 
2 When product is being charged, the LED light will be flashing.

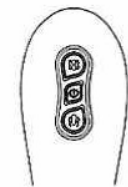


3 When solid light appears, charging is complete.

⊗When being charged, the toy must be in shutdown state and cannot be used.

 
1

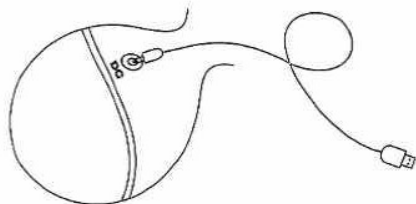

 Put the DC charging plug into the hole of controller to charge. Then insert the USB charging plug into the USB port of your computer or other charger (output:5V=1A or 5V=1.5A).



 2 When product is being charged, the LED light will be flashing.





3 When solid light appears, charging is complete.


⊗When being charged, the toy must be in shutdown state and cannot be used.

Directions for use

  1. After receiving the product, please charge it fully before use (refer to charging guide).
2. Press button **b** / **d** 1.5 seconds to turn on/off.
3. Press button **c** for controller vibration control. Press 1.5 seconds to turn on/off.
4. Press button **a** for egg vibration wireless control. Press 1.5 seconds to turn on/off.

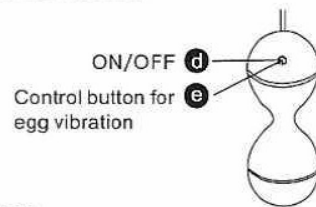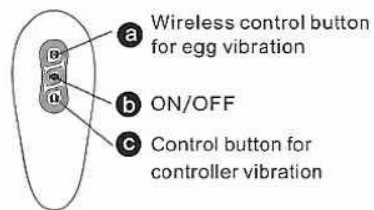

Vibration curve graph

 

Attention

1. Please charge the product properly in a safe place.
2. Water-based lube is suggested as lubricant. Do not apply massage oil or hand cream to the toy surface.
3. Stop using the product, if you feel uncomfortable or you find it is no longer smooth. It has sharp edges.
4. Not recommended to use it below one meter from the water.
5. Please clean it before and after use with warm water and soap (boiling water NOT allowed), sometimes with detergent, disinfectant or 75% alcohol.
6. Keep it in cool and dry place. Avoid direct sunlight.
7. Keep it out of reach of children.
8. The product contains lithium battery. Please do not put it in the non-recycle bin for disposal.

