

VIBRATING EGG APHOJOY LICKING JUMP

User manual



CONTROL

- 1) The controls can be found on the loop, either one button alone or on the controller and there are three buttons.
- 2) To turn on/off, long press the middle button for about 2 seconds.
- 3) You must always have the controls on the egg itself running at the same time, also by long holding.
- 4) The waveform is used to select vibrations and escalations.
- 5) The last button with the pictograms of small drops saves the last used escalation level and when pressed again it will trigger the fastest vibration level.

MAINTENANCE

After each use, rinse the egg with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The egg is **water resistant**, so maintenance is very easy.

The egg can be splashed with water, but you **MUST NOT immerse it in water!**

Waterproof means that you could completely submerge the product in water and enjoy water play.

Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

The remote controller is powered by one 12V 23A battery.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrating egg, a remote control, a magnetic USB cable for charging and a 12V 23A battery.