

Instruction for Use

1. The top vibration button: press and hold this button for 1.5 seconds in the off state; when the indicator light is on, the product starts to vibrate;
2. The bottom vibration button: press and hold this button for 1.5 seconds in the off state; when the indicator light is on, the product starts to vibrate;
3. In the operating state, each time you press the button, the vibrating frequency can be changed accordingly, with a total of 10 vibrating frequencies;
4. Press and hold the vibration button for 1.5 seconds to turn off the vibration and the indicator light is off.

The Bottom Vibration Button

How to Charge

1. Ⓞ is a waterproof charging hole;
2. Please use the charging cable in the package and insert it into the charging hole. When the indicator light is on, the vibration button flashes, which indicates that the device starts charging.
3. After the charging is completed, the indicator light is normally on;
4. Recommended charging time: 1.5 hours; it can be used for 1 hour after completion.

Waterproof Charging Hole

Persons under the age of 18 are prohibited from using this product!

Instruction Manual

Cleaning and Maintenance Methods

1. Please clean the product with warm water, or use bactericidal soap to clean the main part of the product, and then rinse with hot water;
2. Gently pat the product dry with a piece of lint-free cloth or a towel;
3. For maintenance, put the product in a dry place and keep the storage environment clean; the product should be separated from other material products and should be kept away from children;
4. Do not use detergents that contain alcohol, benzene or acetone to clean the product, and the product should avoid direct sunlight.

12-month Quality Assurance

This device has passed the most strict quality inspections. We ensure that the device does not have any production defects and enjoys a 12-month quality assurance service in accordance with the quality assurance regulations of relevant products of the manufacturing country. If there is any product warranty defect in the product itself, please contact us in time, we will replace the product for free. The

damages resulting from improper use or man-made damage or the repairs or dismantling by persons other than the retailer, technicians or customer service center are not covered by the quality assurance service.

Precautions

1. This product is only suitable for adults. It is not a contraceptive product and should be kept away from children;
2. Do not use too much force during use, and please pay attention to avoid injury;
3. Please do not share this product with any other person in using it. If you feel any discomfort during use, please stop using this product immediately;
4. The product should be inspected regularly for damage and should be stopped immediately if it is found to be damaged.